



NOTES:

1. REMOVE ALL EXISTING LEAD AND FLASHING MATERIAL BEFORE INSTALLING PIPE FLASHING.
2. TEMPERATURE OF THE METAL COLLAR MUST NOT EXCEED 140° F (60° C).
3. ENSURE, NO HOT GASES OR STEAM LEAK OR INFILTRATE INTO ROOF ASSEMBLY.

	CFA CERTIFIED HOT PIPE FLASHING		DETAIL NO.
	MAXIMUM WARRANTY: 30 YEARS		U- 8F U (Universal Detail)