


# SECURTAPER

**Steps:**

1. Assemble the tape roll holder using either a 3" or 6" roll of QA Seam Tape.
2. Pull back tension plate and insert roll holder assembly. Release tension plate.
3. Set SecurTAPER onto EPDM sheet and verify alignment of front and back rollers. Adjust guide bar to be positioned on pre-marked line for Fully Adhered systems or center over seam plates for Mechanically Attached systems.
4. Tilt the SecurTAPER back and feed QA Seam Tape through the unit and wrap and hold the QA Seam Tape around the front roller. Tilt the SecurTAPER forward and set the tape into position.
5. Push SecurTAPER forward and apply the QA Seam Tape.

**CAUTION: Recommended for poly-backed seam tapes only and on Mechanically Attached or Fully Adhered Systems.**

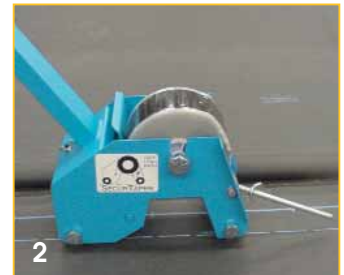

# SECURTAPER

**Pasos:**

1. Ensamble el soporte de la cinta usando un rollo de QA Seam Tape ya sea de 3" o 6".
2. Jale de la placa de tension e inserte el soporte de cinta ya ensamblado. Libere la placa de tension.
3. Fije la cinta SecurTAPER en la hoja de EPDM y verifique que los rodillos frontal y trasero estén alineados. Ajuste la guía de barra hasta que estén en la posición marcada por línea.
4. Incline la cinta SecurTAPER hacia atrás e introduzcala a través de la unidad. Envuelva la cinta QA Seam Tape al rededor del rodillo frontal y verifique que esté bien sujeta. Incline la cinta SecurTAPER hacia adelante y pongala en posición.
5. Empuje la cinta SecurTAPER hacia adelante y aplíquela.

**PRECAUCION:** Recomendado solo para cintas de costura con poli-respaldo.

