



PANEL END-LAP

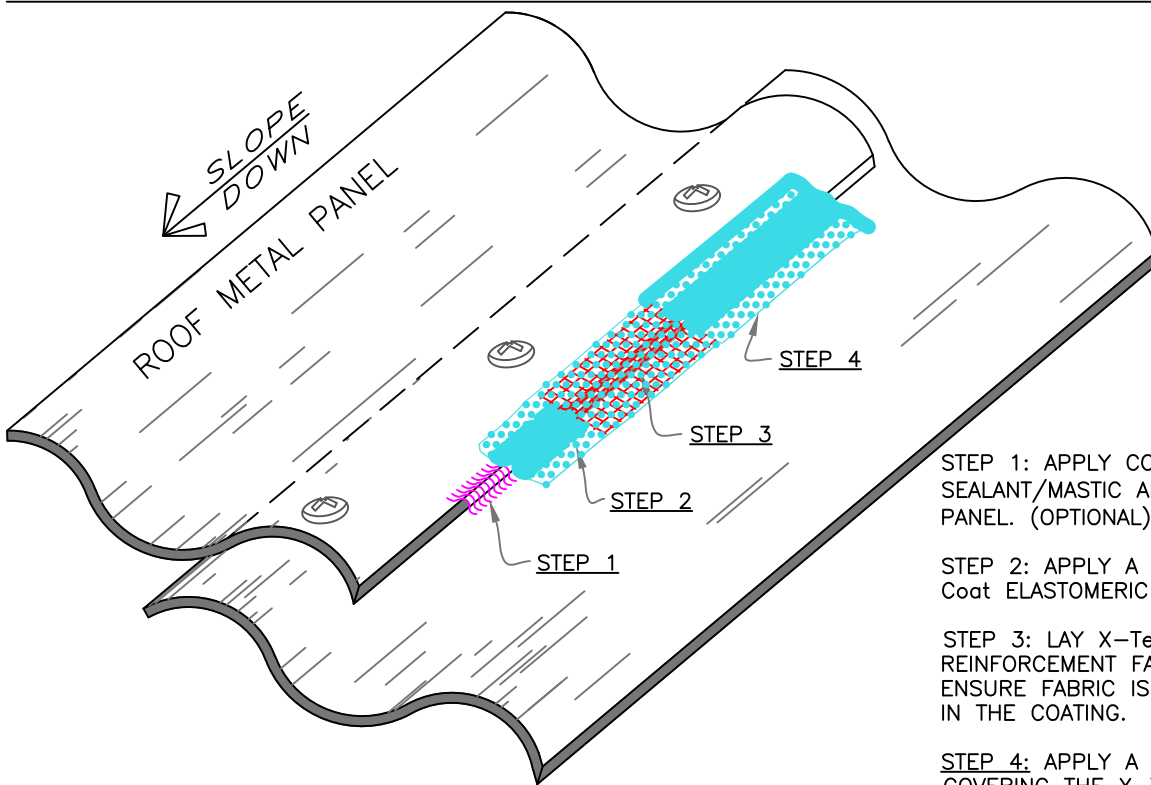

STEP 1: APPLY CONTINUOUS SEALANT/MASTIC ALONG THE EDGE OF PANEL. (OPTIONAL).

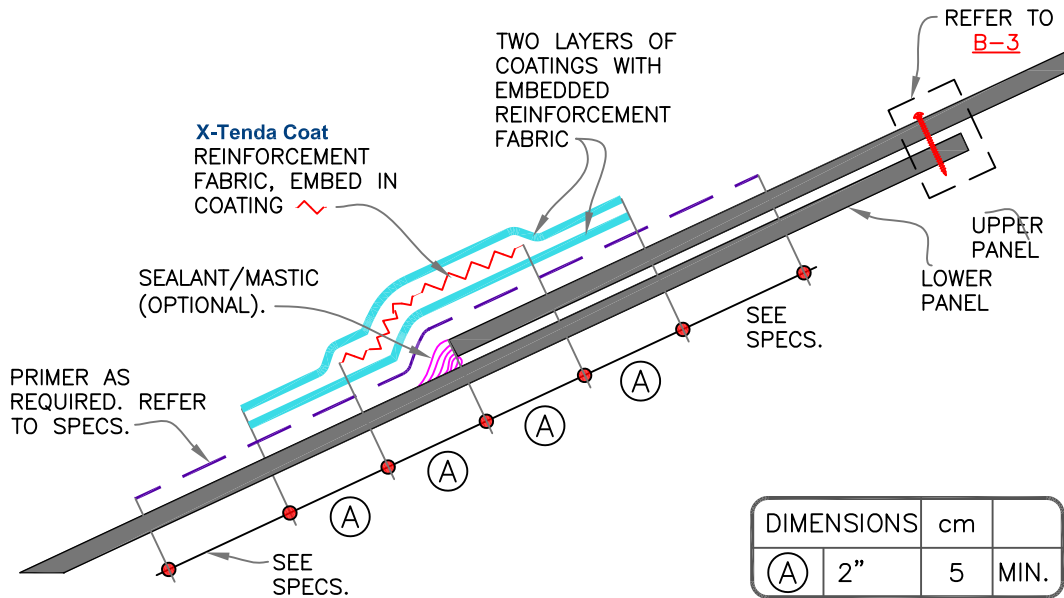




STEP 2: APPLY A LAYER OF X-Tenda Coat ELASTOMERIC COATING.

STEP 3: LAY X-Tenda Coat REINFORCEMENT FABRIC IN COATING. ENSURE FABRIC IS PROPERLY EMBEDDED IN THE COATING.

STEP 4: APPLY A 2ND LAYER OF COATING COVERING THE X-Tenda Coat REINFORCEMENT FABRIC AND SLIGHTLY EXTEND BEYOND THE BOTTOM COATING.

PANEL SIDE LAP

REFER TO [ABOVE](#) DETAIL FOR DIMENSIONS

<div><p>VERSICO ROOFING SYSTEMS</p></div> <div><div><p>X-Tenda Coat COATING</p></div><div><p>X-Tenda Coat PRIMER</p></div><div><p>REINFORCEMENT</p></div><div><p>X-Tenda Coat MASTIC</p></div><div><div><div>0</div><div>NOTE(S)</div></div></div></div> <td colspan="2">PANELS END LAP & SIDE LAP DETAILS</td> <td>X-Tenda Coat</td>	PANELS END LAP & SIDE LAP DETAILS		X-Tenda Coat
	NEW COATING ON EXISTING METAL ROOFS		B-4
	For additional information, refer to Specifications		