



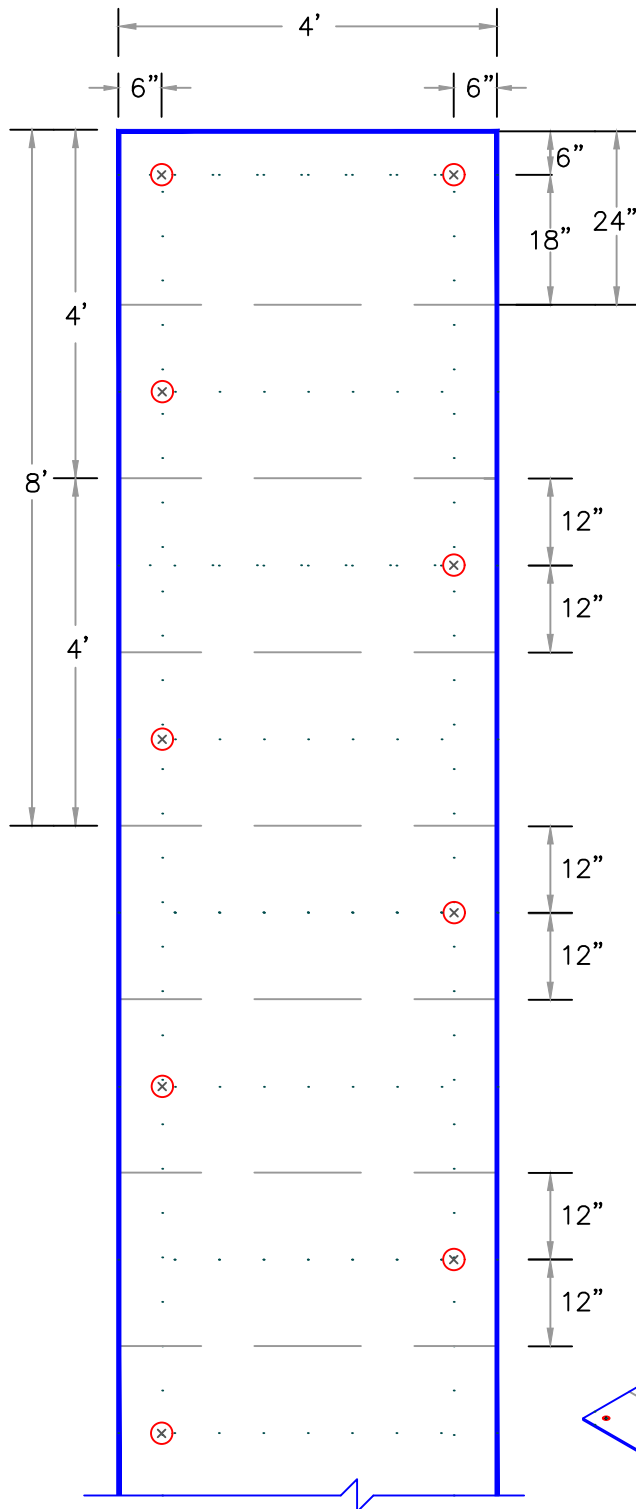

NOTES:

1. INSTALL R-TECH RECOVER BOARD WITH CONTINUOUS SIDE JOINTS AND END JOINTS STAGGERED SO THEY ARE OFFSET BY A MINIMUM OF 12" (30cm) FROM THE END JOINTS IN ADJACENT ROWS.
2. INSULATION SHOULD ABUT TIGHTLY AGAINST ADJACENT BOARDS.
3. IF R-TECH FANFOLD RECOVER BOARD IS BEING INSTALLED OVER AN EXISTING LAYER OF INSULATION, ALL JOINTS MUST BE OFFSET A MINIMUM OF 6" (15cm) BETWEEN LAYERS.
4. FASTENERS SHOULD NEVER BE CLOSER THAN 6" (15cm) FROM THE EDGES OF THE BOARD.
5. CARE MUST BE TAKEN TO AVOID OVERDRIVING OR UNDER-DRIVING THE FASTENER AND PLATE ASSEMBLY.
6. METALLIC FACER PERMITS THE USE OF R-TECH RECOVER BOARD UNDER EPDM MECHANICALLY FASTENED ASSEMBLIES IN NORTHERN CLIMATES (CONTACT VERSICO FOR ACCEPTANCE).
7. FOR NON-FM ASSEMBLY REFER TO DETAIL MF-27.3

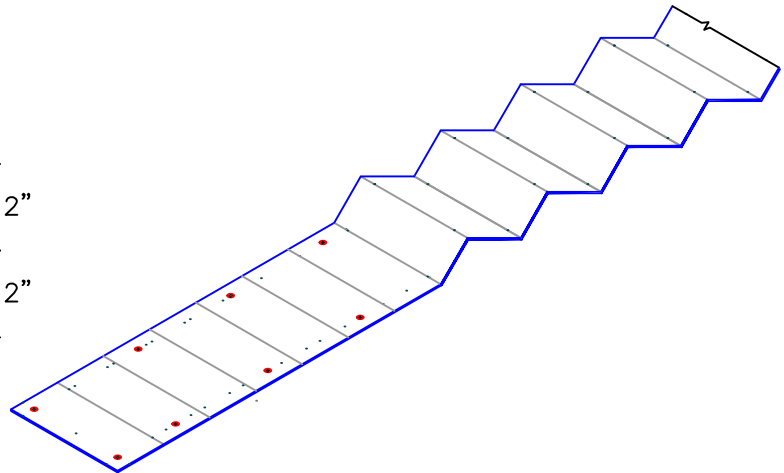


FEET TO CENTIMETERS	
4'	8'
122	244

	INCHES TO CENTIMETERS																
inch	1/4"	1/2"	3/4"	1"	1.5"	2"	2.5"	3"	4"	5"	6"	7"	8"	9"	10"	11"	12"
cm	1	1.5	2	2.5	4	5	6.5	7.5	10	13	15	18	20	23	25	28	30



R-Tech FANFOLD ROOF
UNDERLAYMENT FOR FM
ASSEMBLIES

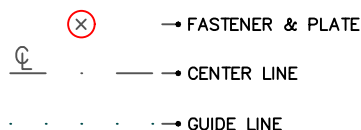

MECHANICALLY
ATTACHED SYSTEM

MA-27.4