
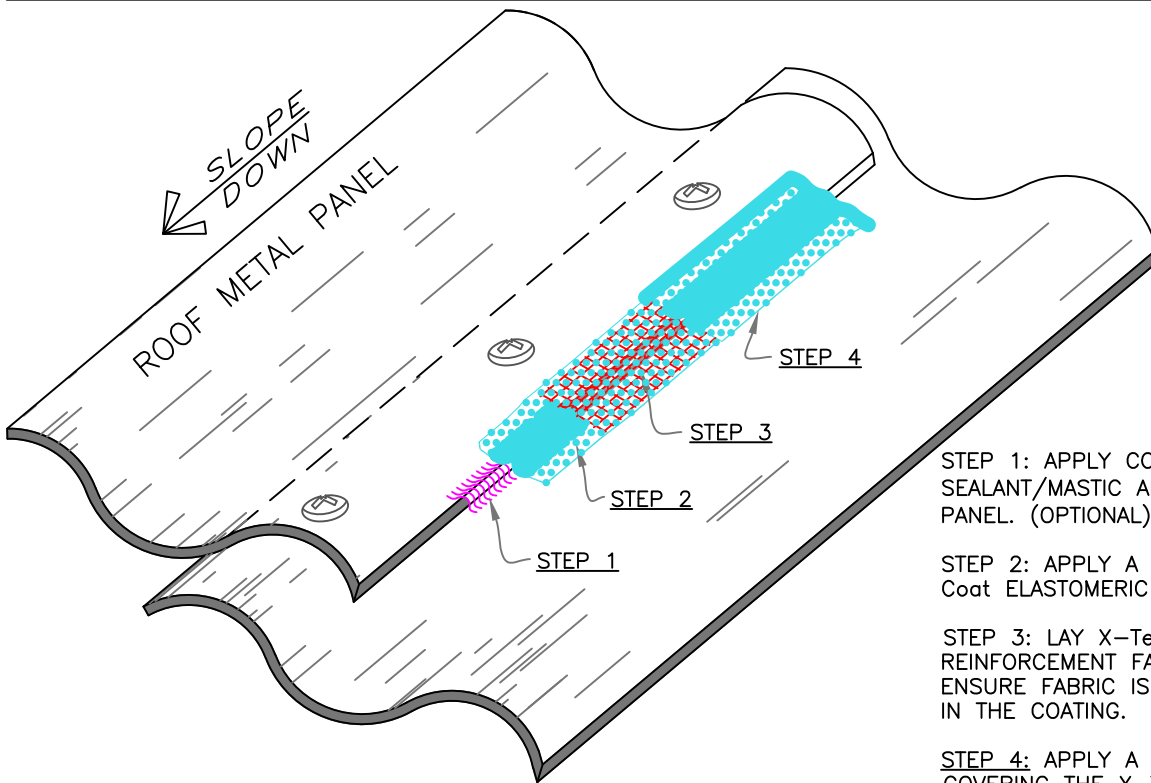


PANEL END-LAP

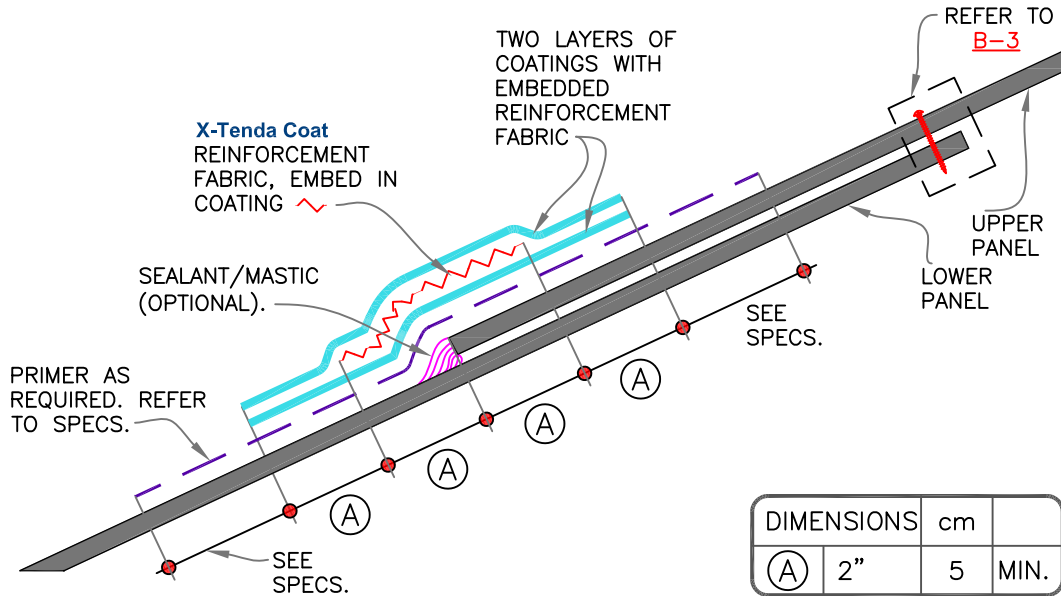

STEP 1: APPLY CONTINUOUS SEALANT/MASTIC ALONG THE EDGE OF PANEL. (OPTIONAL).

STEP 2: APPLY A LAYER OF X-Tenda Coat ELASTOMERIC COATING.

STEP 3: LAY X-Tenda Coat REINFORCEMENT FABRIC IN COATING. ENSURE FABRIC IS PROPERLY EMBEDDED IN THE COATING.

STEP 4: APPLY A 2ND LAYER OF COATING COVERING THE X-Tenda Coat REINFORCEMENT FABRIC AND SLIGHTLY EXTEND BEYOND THE BOTTOM COATING.

PANEL SIDE LAP

REFER TO ABOVE DETAIL FOR DIMENSIONS

	PANELS END LAP & SIDE LAP DETAILS	X-Tenda Coat
	NEW COATING ON EXISTING METAL ROOFS	B-4
<p>— X-Tenda Coat COATING</p> <p>— X-Tenda Coat PRIMER</p> <p>~ REINFORCEMENT</p> <p>~ X-Tenda Coat MASTIC</p> <p>0 NOTE(S)</p>	For additional information, refer to Specifications	