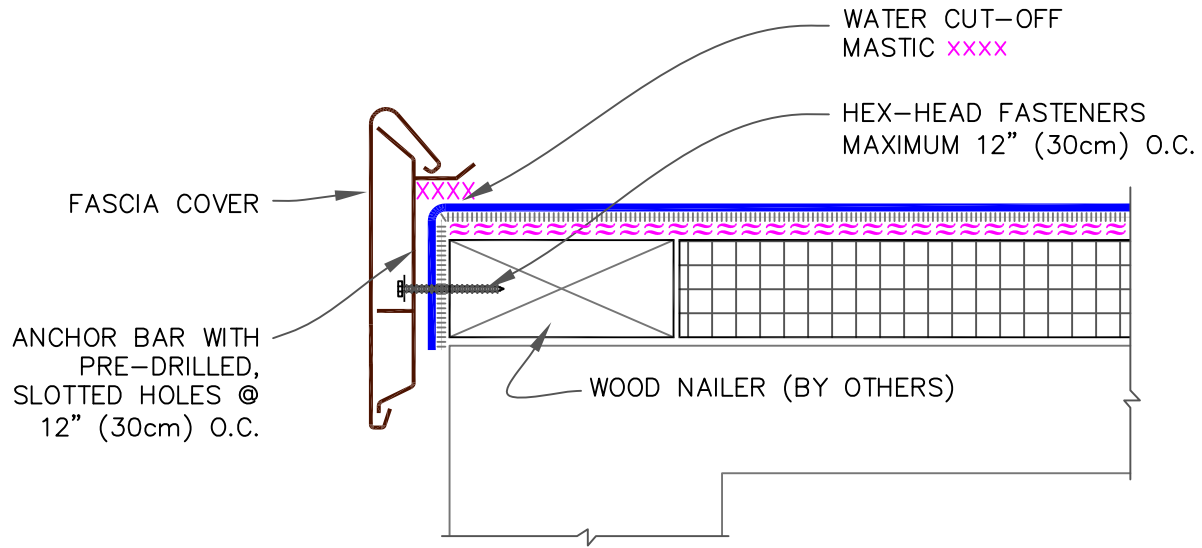
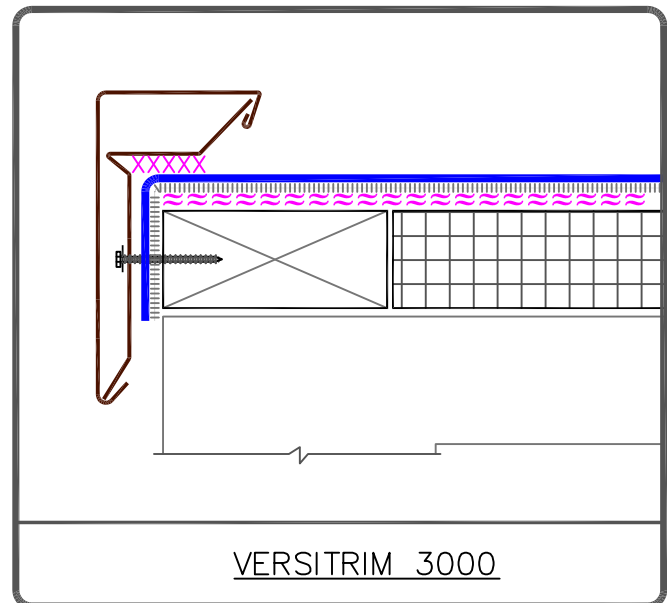


VERSITRIM 2000

NOTES:

1. REFER TO VERSITRIM 2000 OR 3000 INSTRUCTION MANUALS FOR STEP BY STEP INSTALLATION PROCEDURES.
2. IF INCIDENTAL/TEMPORARY PONDED WATER IS EXPECTED, THE VERSITRIM MUST BE ELEVATED AND SCUPPERS PROVIDED FOR DRAINAGE.
3. ENSURE ROOF SLOPES AWAY FROM VERSITRIM.

VERSITRIM 3000