





GUIDELINES FOR ROOF PERIMETER

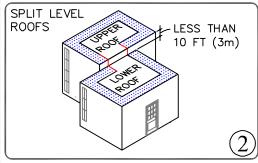

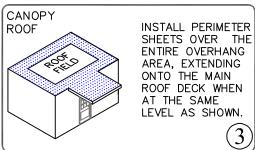

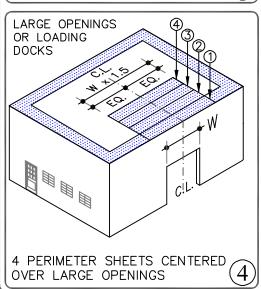

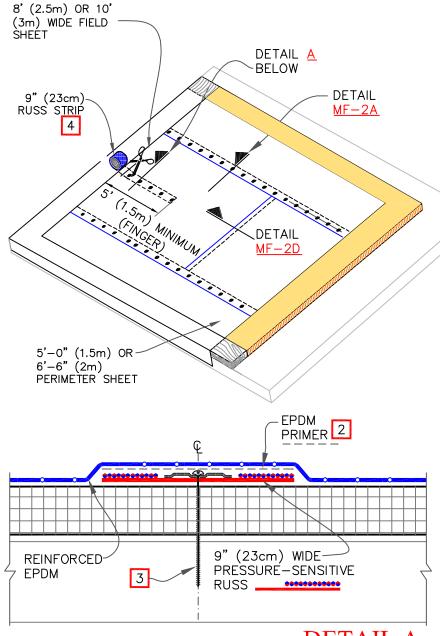

## NOTES:

## **DETAIL A**

- 1. REFER TO CARLISLE SPECIFICATIONS FOR REQUIRED NUMBER OF PERIMETER SHEETS, SHEET WIDTH AND MEMBRANE FASTENING DENSITY.
- 2. EPDM PRIMER MUST BE APPLIED TO THE BACK SIDE OF MEMBRANE SURFACE PRIOR TO ADHERING MEMBRANE TO PRESSURE-SENSITIVE RUSS.
- 3. HP FASTENERS AND POLYMER SEAM PLATES ARE REQUIRED OVER STEEL DECKS.
- 4. RUSS "FINGER" MUST EXTEND THE WIDTH OF THE REQUIRED PERIMETER.

RUSS (REINFORCED UNIVERSAL SECUREMENT STRIP)



MECHANICALLY FASTENED EPDM SECUREMENT - OPTION 3 (RUSS)

MF-2.3

MAXIMUM WARRANTY: 30 YEARS

MECHANICALLY FASTENED