


SECUREDGE ELIMINAILER-T METAL ROOF RETROFITS


FLUTE FILL METAL ROOF VERSION

INSTALLATION INSTRUCTIONS

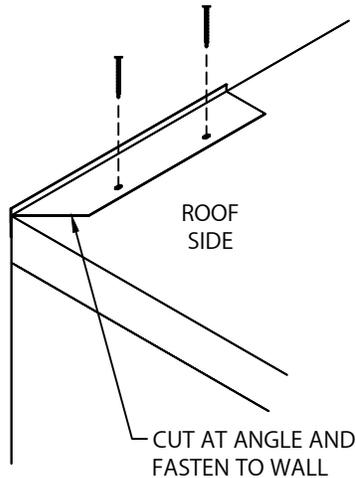


1. OUTSIDE MITER FABRICATION

CUT A PIECE OF ELIMINAILER T (ANY LENGTH) ON AN ANGLE. FASTEN TO WALL 6" O.C. AT CORNER WITH PROVIDED FASTENERS.

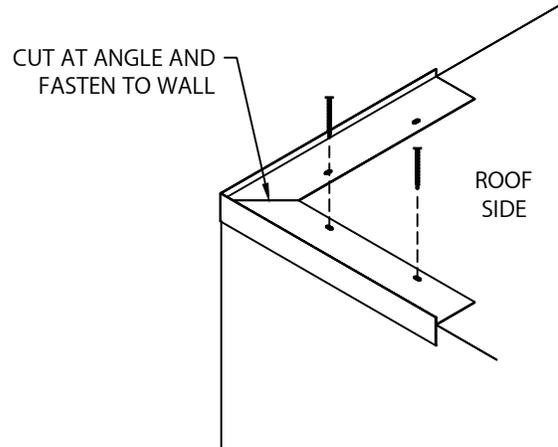

2. OUTSIDE MITER FABRICATION


CUT A SECOND PIECE OF ELIMINAILER T (ANY LENGTH) ON AN ANGLE TO FORM A COMPLETE MITER. FASTEN TO WALL AT CORNER WITH PROVIDED FASTENERS 6" O.C.

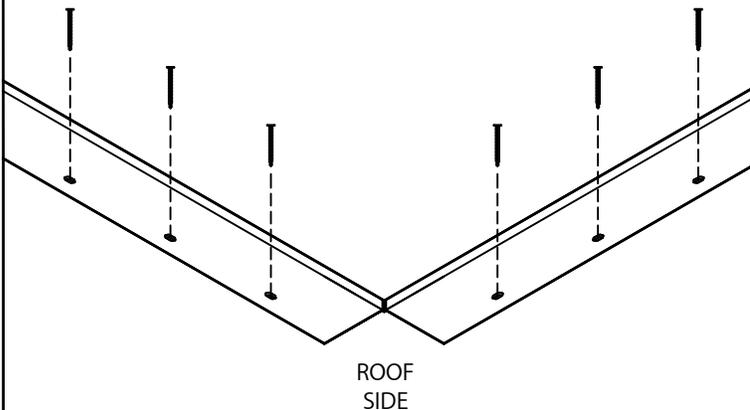

3. INSIDE MITERS

NO BAR CUTTING IS NEEDED FOR INSIDE MITERS. SIMPLY BUTT FULL SIZE BARS TIGHT INTO CORNER AND FASTEN TO WALL 6" O.C. WITH PROVIDED FASTENERS.

TYPICAL INSTALLATION

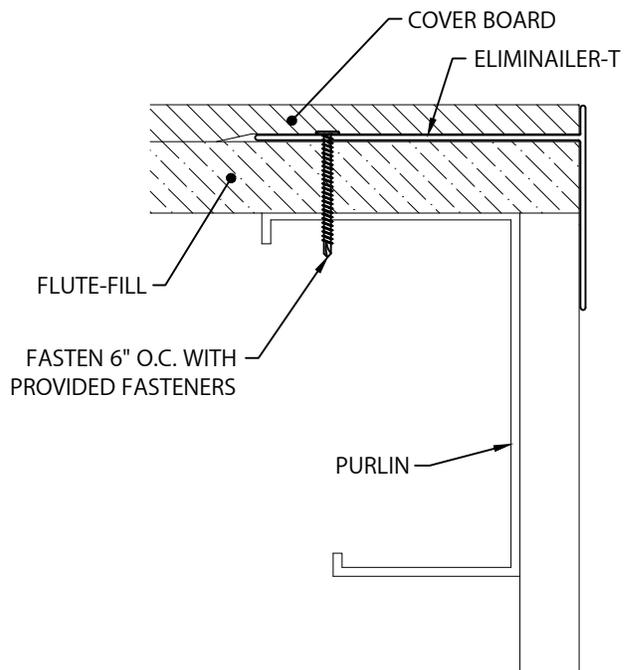

Customer Service
866-458-3537
(Metal-Era)


DATE: 04/08/22
DRN BY: MLM
CKD BY: MM

SHT.# 1 OF 2
DWG# 15118-30070

B

SECUREDGE ELIMINAILER-T METAL ROOF RETROFITS

FLUTE FILL METAL ROOF VERSION

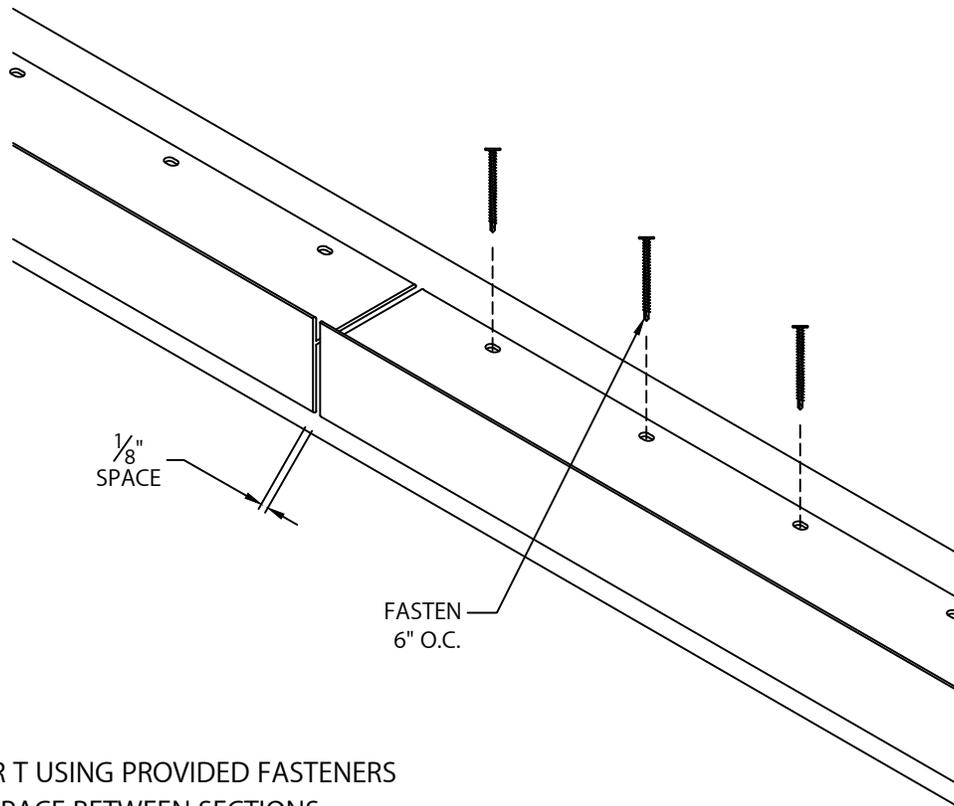

4. ELIMINAILER T

FASTEN ELIMINAILER T USING PROVIDED FASTENERS
6" O.C. LEAVE A 1/8" SPACE BETWEEN SECTIONS.



Customer Service
866-458-3537
(Metal-Era)

DATE: 04/08/22
DRN BY: MLM
CKD BY: MM

SHT.# 2 OF 2
DWG# 15118-30070 **B**