




FASTEN MEMBRANE AND FLASH CURB OR WALL WITH MEMBRANE FOLLOWING STANDARD PROCEDURES USING BONDING ADHESIVE AND SURE-WHITE PRESSURE-SENSITIVE TAPE OR HOT AIR WELDING.

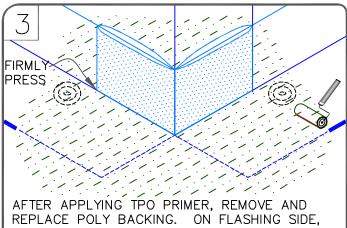


FOLD 9"x9" (23cm x 23cm) FLASHING IN HALF WITH ROUNDED PORTION TURNED UP. CENTER FLASHING ON CORNER AND FIRMLY PRESS AGAINST VERTICAL SURFACE.

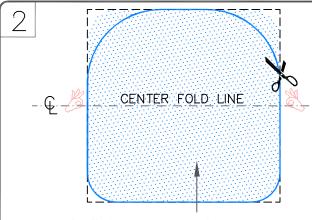

CUT A 9"x9" (23cm x 23cm) SECTION OF SURE-WHITE (WHITE OR GRAY) PRESSURE-SENSITIVE UNCURÉD FLASHING AND MAKE ROUNDED CORNERS AS SHOWN.

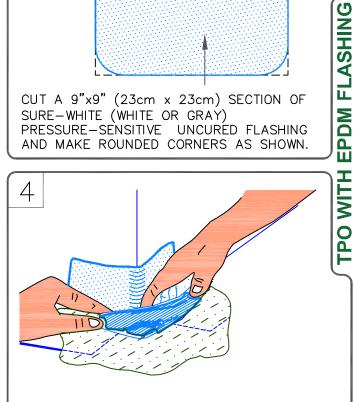

ROLL AND CREASE FLASHING TIGHTLY INTO ANGLE CHANGE AND FIRMLY ROLL FLASHING ONTO THE DECK MEMBRANE.

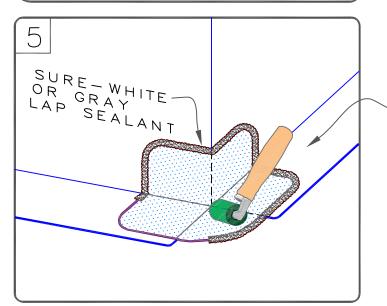

AFTER ADHERING, ROLL WITH A TWO INCH WIDE ROLLER. PAY PARTICULAR ATTENTION TO THE STEP OFFS AND ANGLE CHANGES.

IN COLDER TEMPERATURES, A HEAT GUN MUST BE USED WHEN FORMING PRESSURE-SENSITIVE UNCURED FLASHING.

WARRANTY REQUIREMENTS DETAIL NOT FOR USE ON 25-30 YEAR WARRANTY ROOFS.



OUTSIDE CORNER WITH EPDM PRESSURE-SENSITIVE ELASTOFORM FLASHING (OPTION 2)

MAXIMUM WARRANTY: 20 YEARS



DETAIL NO. -15G7