




FASTEN MEMBRANE AND FLASH CURB OR WALL WITH CURED EPDM MEMBRANE FOLLOWING STANDARD PROCEDURES.

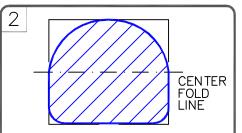


USE PRE-CUT T-JOINT COVERS OR CUT A 6"x6" (15X15cm) & 12"x12" (30X30cm) SECTION OF PRESSURE- SENSITIVE ELASTOFORM FLASHING AND ROUND CORNERS

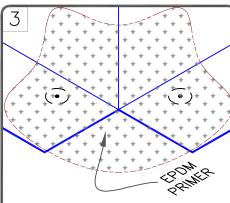

CLEAN EPDM SPLICE AREA WITH WEATHERED MEMBRANE CLEANER PRIOR TO APPLYING EPDM PRIMER

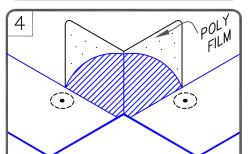


REMOVE & REPLACE POLY BACKING ON FLASHING. FOLD FLASHING IN HALF WITH ROUNDED PORTION TURNED UP. CENTER ON CORNER & FIRMLY PRESS AGAINST VERTICAL **SURFACE**

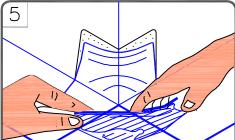



ROLL & CREASE FLASHING TIGHTLY INTO ANGLE CHANGE & FIRMLY ROLL FLASHING ONTO THE DECK MEMBRANE

USE HEAT GUN TO WARM THE FLASHING IN COLD WEATHER

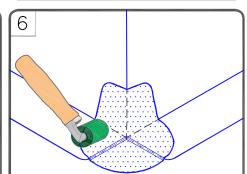


ROLL WITH A TWO INCH WIDE STEEL HAND ROLLER. PAY PARTICULAR ATTENTION TO THE STEP OFFS AND ANGLE **CHANGES**

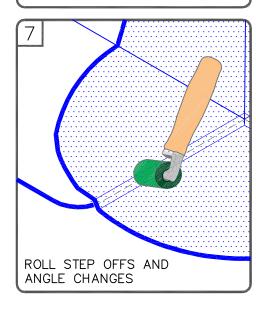

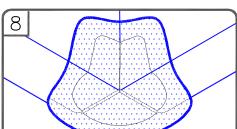

APPLY EPDM PRIMER TO SPLICE AREA. INSTALL THE 12"X12" (30cmX30cm) SECTION OF PRESSURE - SENSITIVE ELASTOFORM FLASHING CENTERED OVER PREVIOUSLY APPLIED FLASHING.

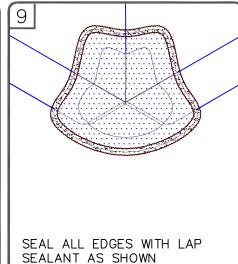



OUTSIDE CORNER FLASHING FOR PROJECTS WITH 90-MIL MEMBRANE OR 30 YEAR WARRANTIES

MAXIMUM WARRANTY: 30 YEARS



DETAIL NO.

U - 15G.1

U (UNIVERSAL DETAIL)