




FASTEN MEMBRANE AND FLASH CURB OR WALL WITH CURED EPDM MEMBRANE FOLLOWING STANDARD PROCEDURES.

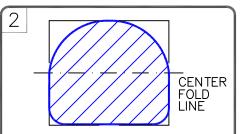


USE PRE-CUT T-JOINT COVERS OR CUT A 6"x6" (15X15cm) & 12"x12" (30X30cm) SECTION OF PRESSURE- SENSITIVE ELASTOFORM FLASHING AND ROUND CORNERS

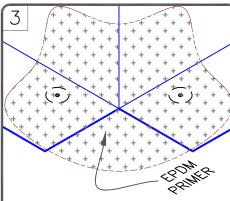

CLEAN EPDM SPLICE AREA WITH WEATHERED MEMBRANE CLEANER PRIOR TO APPLYING EPDM PRIMER

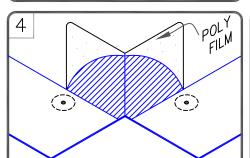


REMOVE & REPLACE POLY
BACKING ON FLASHING. FOLD
FLASHING IN HALF WITH
ROUNDED PORTION TURNED UP.
CENTER ON CORNER & FIRMLY
PRESS AGAINST VERTICAL
SURFACE

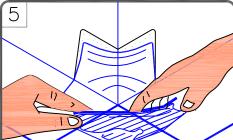



ROLL & CREASE FLASHING TIGHTLY INTO ANGLE CHANGE & FIRMLY ROLL FLASHING ONTO THE DECK MEMBRANE

USE HEAT GUN TO WARM THE FLASHING IN COLD WEATHER

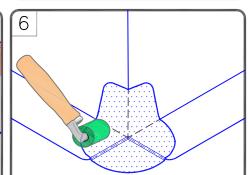


ROLL WITH A TWO INCH WIDE STEEL HAND ROLLER. PAY PARTICULAR ATTENTION TO THE STEP OFFS AND ANGLE CHANGES

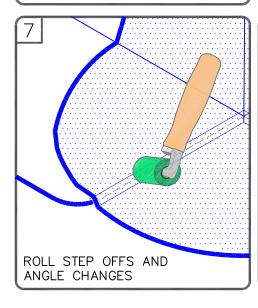

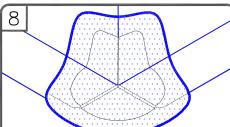

APPLY EPDM PRIMER TO SPLICE AREA. INSTALL THE 12"X12" (30cmX30cm) SECTION OF PRESSURE— SENSITIVE ELASTOFORM FLASHING CENTERED OVER PREVIOUSLY APPLIED FLASHING.

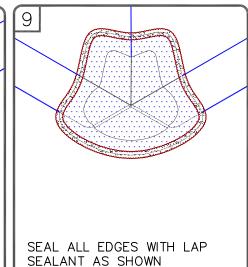



OUTSIDE CORNER FLASHING FOR PROJECTS WITH 90-MIL MEMBRANE OR 30 YEAR WARRANTIES

MAXIMUM WARRANTY: 30 YEARS



DETAIL NO.

U-15G.1

U (UNIVERSAL DETAIL)