


NOTES:

- 1. ROOF DRAIN SIZE AND NUMBER OF DRAINS SHALL BE IN ACCORDANCE WITH THE LOCAL CODES.
- ALL BOLTS OR CLAMPS MUST BE IN PLACE TO PROVIDE CONSTANT COMPRESSION ON WATER CUT-OFF MASTIC.
- 3. FIELD SPLICES MUST BE LOCATED AT LEAST 6" (15cm) OUTSIDE THE DRAIN SUMP.
- 4. INSULATION TAPER SHALL NOT BE GREATER THAN 6" (15cm) IN 12" (30cm) HORIZONTAL.

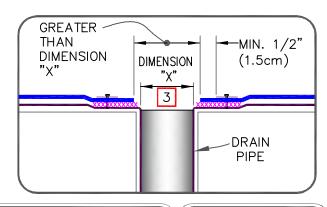



ADD-ON DRAIN

ADD-ON DRAIN

APPROVED SUBSTRATE

O SEE NOTE

PS (PRESSURE SENSITIVE)

P&S (PRESSURE SENSITIVE)

ROOFING SYSTEM

TPC-6.4