


1 APPLY TPO PRIMER

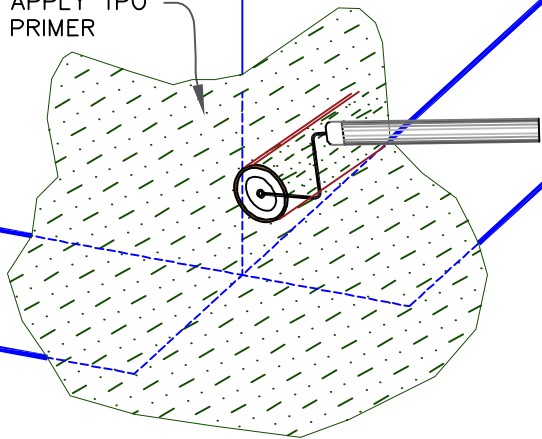

2

STEP  
A

CLEAR POLY  
RELEASE PAPER


FOLD

STEP  
B

PRIOR TO PLACEMENT OF SURE-WHITE PRESSURE-SENSITIVE SURE-WHITE OR COOL GRAY CORNER, PEEL OFF THE POLY RELEASE FILM FROM THE FLASHING SIDE AND HEAT WITH A HEAT GUN. RE-APPLY THE POLY LOOSELY. FOLD THE FLASHING IN HALF.

3


FIRMLY  
PRESS

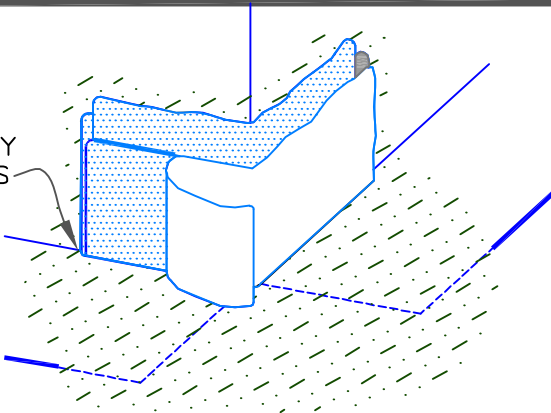

PLACE SURE-WHITE OR COOL GRAY INSIDE/OUTSIDE CORNER AS SHOWN AND REMOVE RELEASE PAPER.

PRESS FOLDED FLASHING TIGHTLY INTO ANGLE CHANGE AND FIRMLY PRESS FLASHING AGAINST THE VERTICAL SURFACE.


4

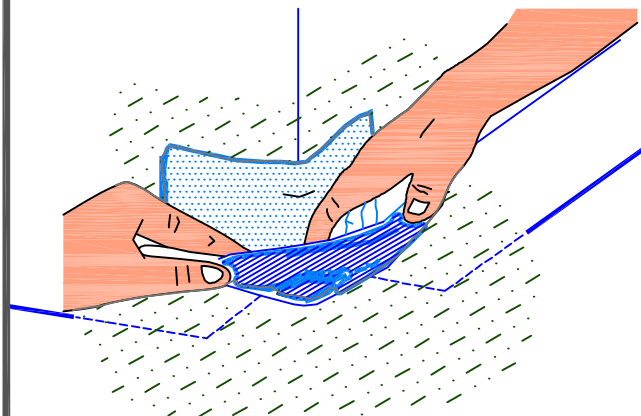

PLACE FOLDED FLASHING TIGHTLY INTO ANGLE CHANGE AND FIRMLY PRESS FLASHING ONTO THE DECK FLANGE BY PRESSING THE FLASHING AGAINST THE HORIZONTAL SURFACE.

5

SURE-WHITE  
LAP SEALANT  
OR GRAY  
UNIVERSAL  
SEALANT

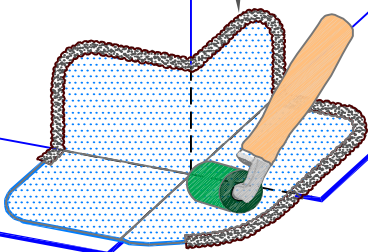

AFTER ADHERING, ROLL WITH A TWO INCH WIDE ROLLER. PAY PARTICULAR ATTENTION TO THE STEP OFFS AND ANGLE CHANGES.

IN COLDER TEMPERATURES, A HEAT GUN MUST BE USED WHEN FORMING PRESSURE-SENSITIVE UNCURED FLASHING.

WARRANTY  
REQUIREMENTS

DETAIL NOT FOR USE  
ON 25-30 YEAR  
WARRANTY ROOFS.

TPO WITH EPDM FLASHING

**CARLISLE**  
SYNTEC SYSTEMS

OUTSIDE CORNER WITH PRE-CUT  
PRESSURE-SENSITIVE EPDM FLASHING  
(OPTION 1)

MAXIMUM WARRANTY: 20 YEARS



DETAIL NO.

U-15ET