


GUIDE NOTE

WHERE GUTTER EXISTS, TO MAINTAIN POSITIVE DRAINAGE, USE METAL DRIP EDGE WITHOUT DAM.

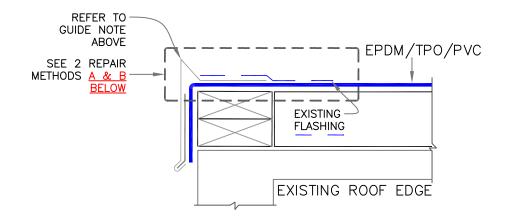

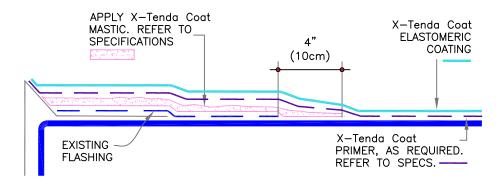

METHOD A: MASTIC APPLICATION

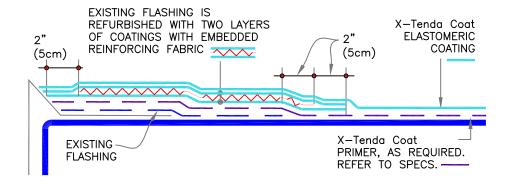

METHOD B: COATING WITH FABRIC

