


NOTES:


- 1. IN CASE THE THREADED FASTENERS ARE USED TO PENETRATE THE METAL COUNTER-FLASHING, USE EPDM WASHERS, APPLY WATER CUT-OFF MASTIC UNDER THE COUNTER-FLASHING OR SEAL THE FASTENER HEADS WITH SEALANT.
- 2. SEAM PLATES AND FASTENERS MAY BE INSTALLED INTO THE VERTICAL SUBSTRATE.
- 3. HPV FASTENERS AND POLYMER SEAM PLATES ARE REQUIRED FOR MECHANICALLY ATTACHED SYSTEMS OVER STEEL DECKS.
- 4. IF THE VERTICAL SPLICE ON THE CURB FLASHING IS NOT LOCATED AT THE CORNER, USE DETAIL VGC-2.3 FOR EPDM MEMBRANE SPLICES AT ANGLE CHANGES.



MAXIMUM WARRANTY: 30 YEARS

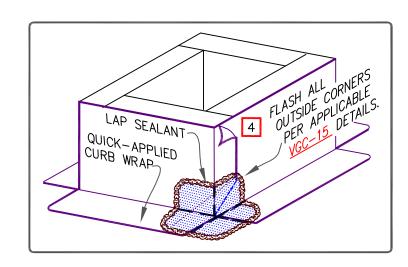

CURB FLASHING — QUICK—APPLIED CURB WRAP WITH 6" TAPE



0

DETAILS (EPDM)

→ SEE NOTE(S)

VGC-5.2

VersiGard COMMON