

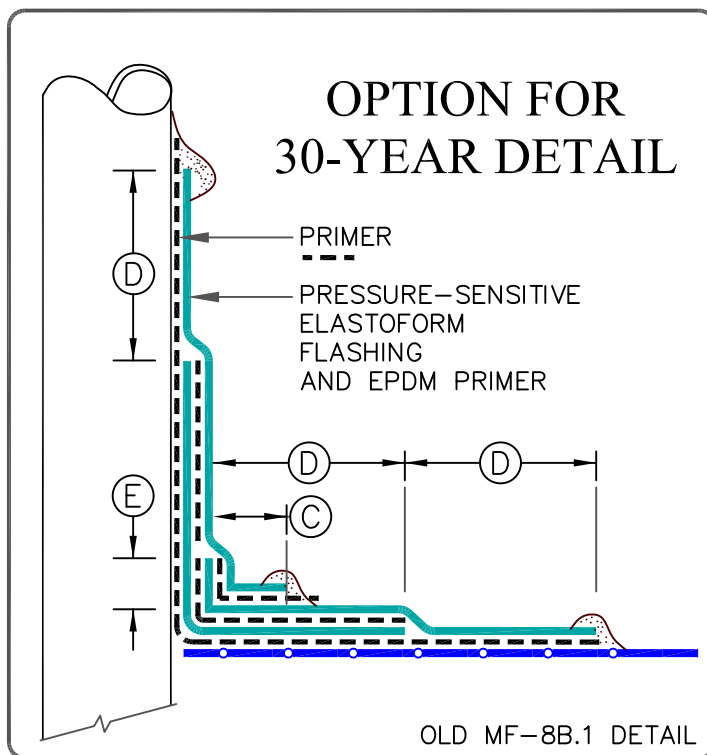


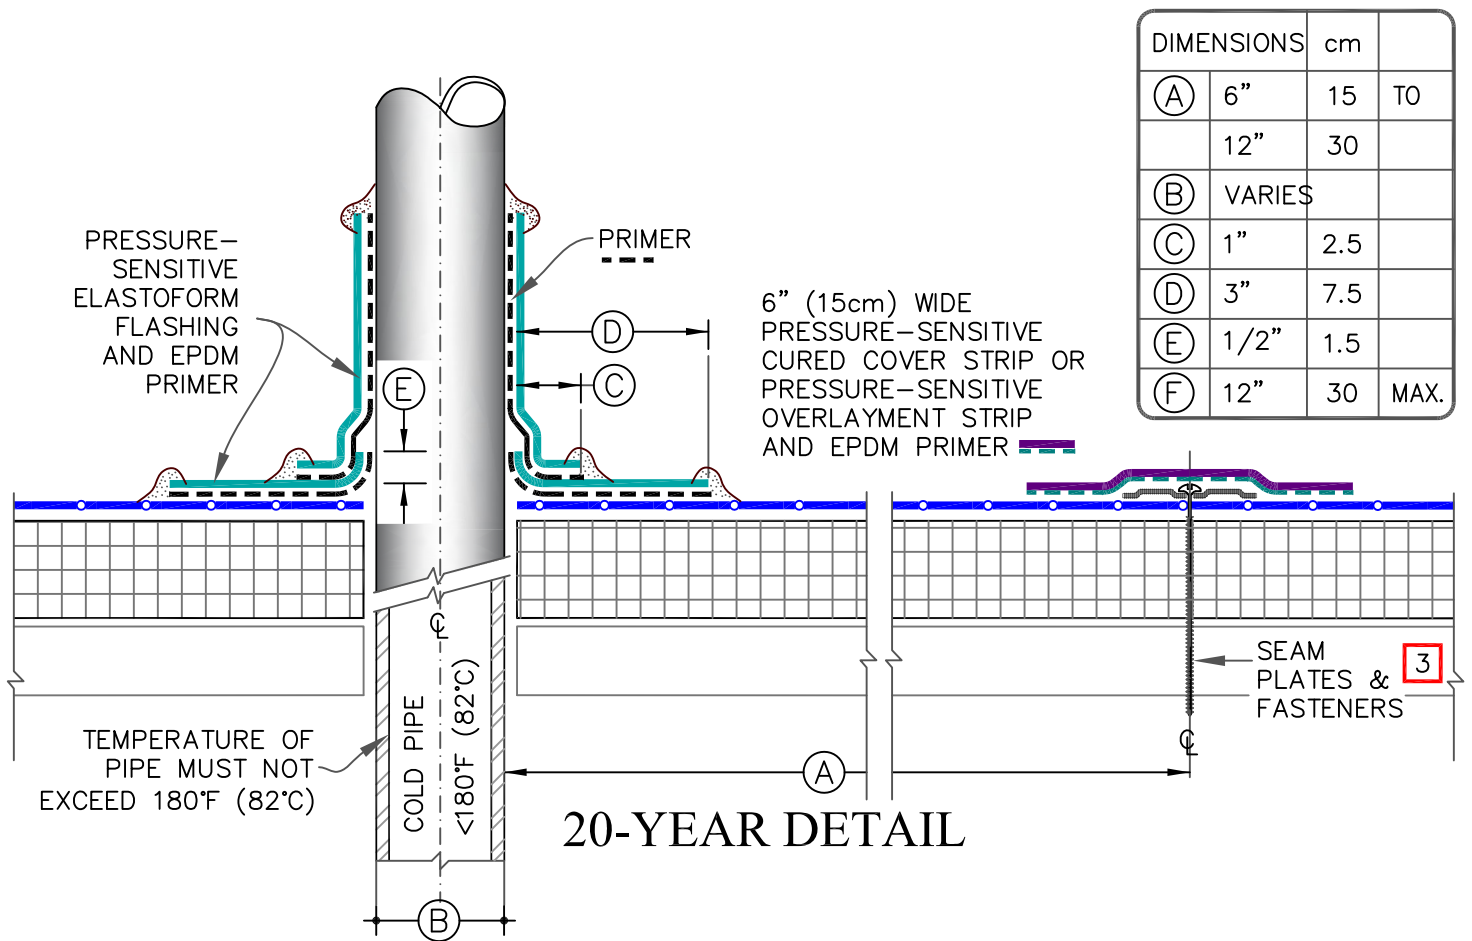


NOTES:

1. REMOVE ALL LEAD AND OTHER FLASHING BEFORE INSTALLING PRESSURE-SENSITIVE ELASTOFORM FLASHING.
2. HP FASTENERS AND POLYMER SEAM PLATES ARE REQUIRED OVER STEEL DECKS.
3. FOR STRUCTURAL STEEL TUBING GREATER THAN 12" ACROSS USE U-5 DETAILS.

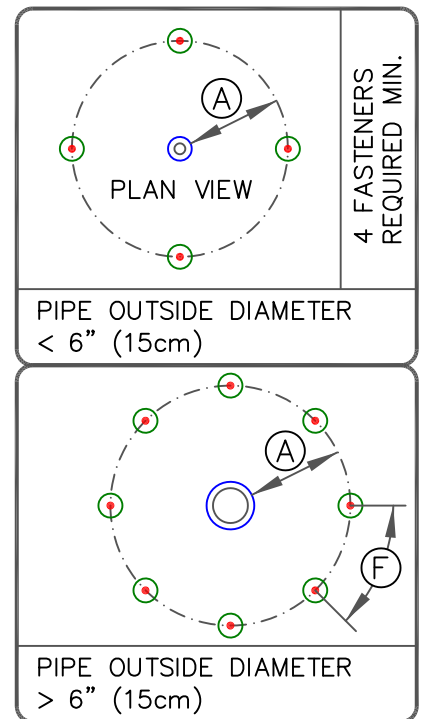

FIELD FABRICATED PIPE WRAP

MAXIMUM WARRANTY: SEE EACH DETAIL



DETAIL NO.

MF-8B

MECHANICALLY FASTENED