
CAUTION

EPDM MEMBRANE SPLICES SHALL INCORPORATE 6" (15cm) WIDE FIELD APPLIED SecurTAPE FOR PROJECTS WITH 20, 25 & 30-YEAR WARRANTIES.

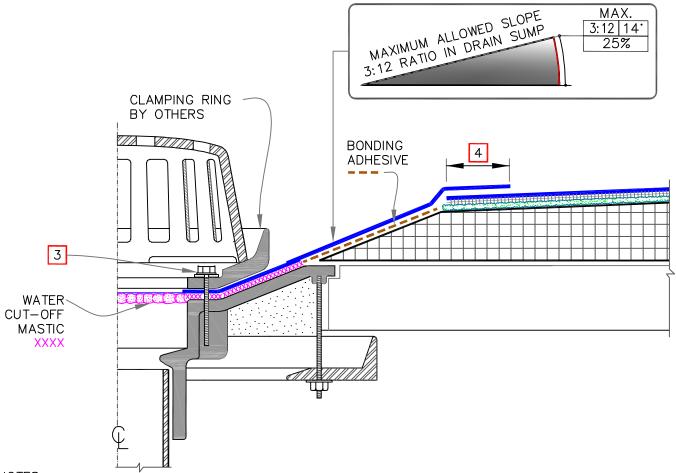

## NOTES:

- 1. REMOVE EXISTING LEAD, FLASHING MATERIAL & ENSURE THE DRAIN RING IS COMPLETELY CLEAN DOWN TO BARE METAL.
- 2. THE HOLE IN THE MEMBRANE SHALL EXCEED THE DIAMETER OF THE DRAIN PIPE, BUT SHALL BE NO LESS THAN 1/2" (1.5cm) FROM THE ATTACHMENT POINTS OF THE DRAIN CLAMPING RING.
- 3. ALL BOLTS OR CLAMPS MUST BE IN PLACE TO PROVIDE CONSTANT COMPRESSION ON WATER CUT-OFF MASTIC.
- 4. SPLICES SHALL BE COMPLETED USING MIN. 3" (7.5cm) WIDE SecurTAPE/ PRIMER WITH EPDM MEMBRANE AND MINIMUM 1-1/2" (4cm) HOT AIR WELD WITH TPO/PVC/KEE HP.
- 5. FIELD SPLICES MUST BE LOCATED AT LEAST 6 INCHES (15cm) OUTSIDE THE DRAIN SUMP.

- 6. APPROXIMATELY 1/8" (0.5cm)
  DIAMETER BEAD OF CUT-EDGE
  SEALANT IS REQUIRED ON CUT EDGES
  OF REINFORCED TPO MEMBRANE.
- 7. ROOF DRAIN SIZE AND NUMBER OF DRAINS SHALL BE IN ACCORDANCE WITH THE LOCAL CODES.

