


ANGLE CHANGE SECUREMENT

NOTES:

1. SURE-WELD MEMBRANE REQUIRES SURE-WELD BONDING ADHESIVE AND SURE-FLEX MEMBRANE REQUIRES SURE-FLEX BONDING ADHESIVE.
2. HP-X FASTENERS AND RhinoBOND PLATES ARE REQUIRED OVER STEEL AND WOOD DECKS. FOR WARRANTY WIND SPEEDS GREATER THAN 72 MPH PLEASE CONTACT CARLISLE FOR REQUIRED FASTENING ENHANCEMENTS.

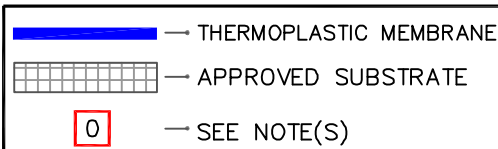

ANGLE CHANGE SECUREMENT METHOD WITH RhinoBond PLATES

For additional information, refer to Specifications



DETAIL NO.

RB-2

RhinoBond