TPO WITH EPDM FLASHING

1

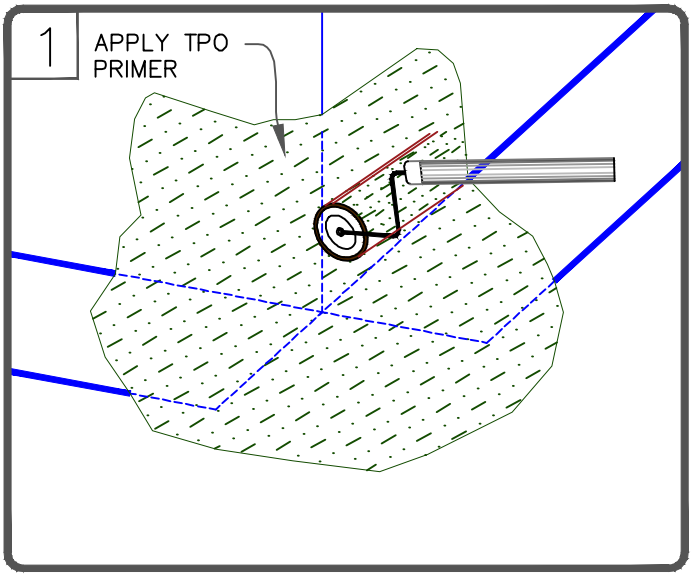

2

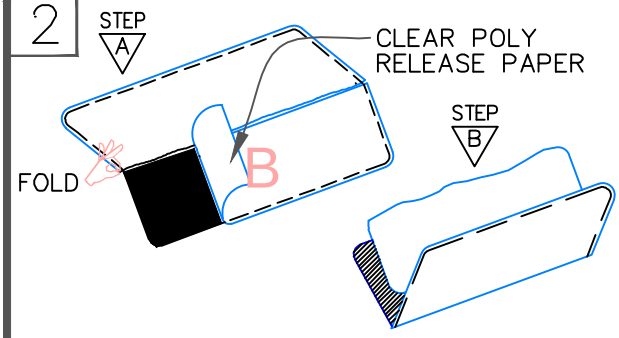

PRIOR TO PLACEMENT OF SURE-WHITE PRESSURE-SENSITIVE SURE-WHITE OR COOL GRAY CORNER, PEEL OFF THE POLY RELEASE FILM FROM THE FLASHING SIDE AND HEAT WITH A HEAT GUN. RE-APPLY THE POLY LOOSELY. FOLD THE FLASHING IN HALF.

3

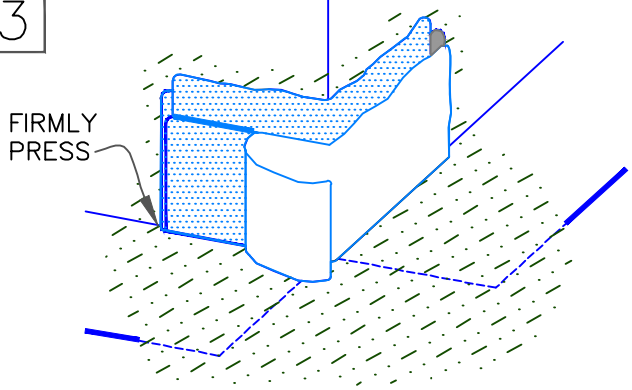

PLACE SURE-WHITE OR COOL GRAY INSIDE/OUTSIDE CORNER AS SHOWN AND REMOVE RELEASE PAPER.

PRESS FOLDED FLASHING TIGHTLY INTO ANGLE CHANGE AND FIRMLY PRESS FLASHING AGAINST THE VERTICAL SURFACE.

4

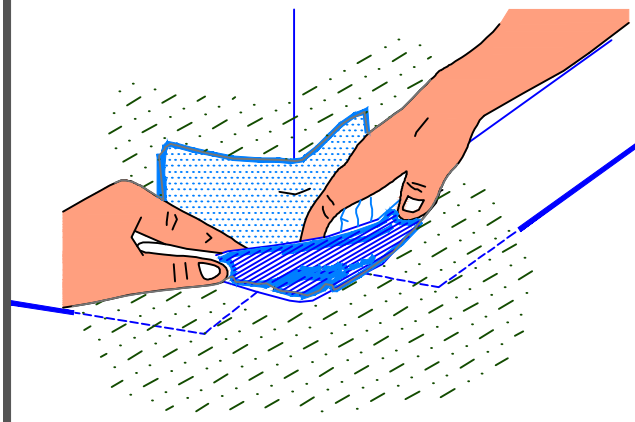

PLACE FOLDED FLASHING TIGHTLY INTO ANGLE CHANGE AND FIRMLY PRESS FLASHING ONTO THE DECK FLANGE BY PRESSING THE FLASHING AGAINST THE HORIZONTAL SURFACE.

5

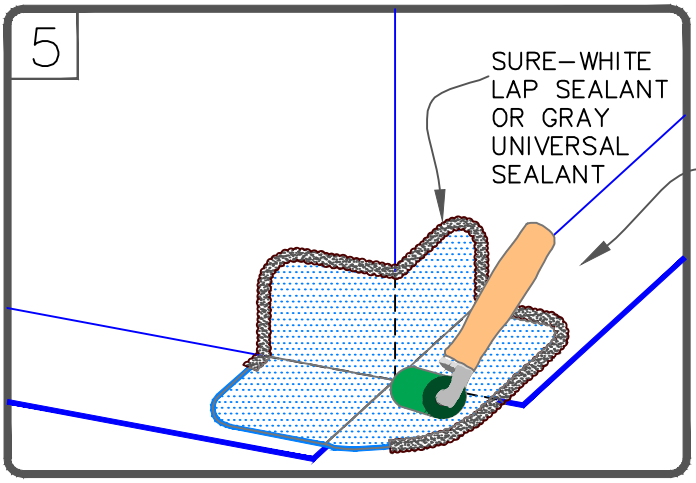

AFTER ADHERING, ROLL WITH A TWO INCH WIDE ROLLER. PAY PARTICULAR ATTENTION TO THE STEP OFFS AND ANGLE CHANGES.

IN COLDER TEMPERATURES, A HEAT GUN MUST BE USED WHEN FORMING PRESSURE-SENSITIVE UNCURED FLASHING.

WARRANTY REQUIREMENTS	DETAIL NOT FOR USE ON 25-30 YEAR WARRANTY ROOFS.

CARLISLE SYNTEC SYSTEMS

OUTSIDE CORNER WITH PRE-CUT PRESSURE-SENSITIVE EPDM FLASHING (OPTION 1)

MAXIMUM WARRANTY: 20 YEARS

TPO

DETAIL NO.

U-15ET

U (Universal Detail)

© 2026 CARLISLE SynTec a division of CARLISLE Construction Materials Incorporated